



Hemisphere


Quick Reference Guide

www.freetekic.com

Hemisphere is a Bluetooth® V3.0 Speakerphone supports Voice Prompt, Multipoint, Voice Recognition.

Overview of Hemisphere:

- (1). Previous song
- (2). Next song
- (3). On /off /MF Button
- (4). Vol-
- (5). Vol+
- (6). Microphone
- (7). LED
- (8). 3.5mm Audio jack
- (9). MicroUSB charging jack

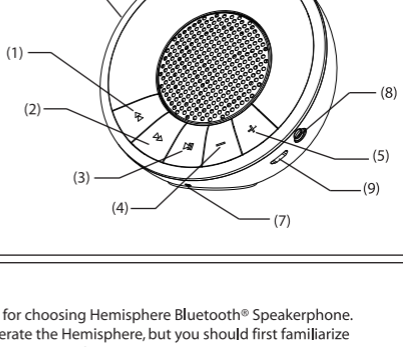


Introduction

Congratulations, and thank you for choosing Hemisphere Bluetooth® Speakerphone. This manual will help you to operate the Hemisphere, but you should first familiarize yourself with the Bluetooth® functionality of your mobile phone or other devices before using the Bluetooth® Speakerphone Hemisphere.

Safety Rules

- (1) Please follow the rules depicted in this manual closely to ensure your safety. Before using this Bluetooth® speakerphone, we would strongly encourage you to read through this user manual.
- (2) Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- (3) Do not modify, repair or dismantle this Bluetooth® speakerphone, doing so, may result in fires, electric shocks, complete breakdown of this Bluetooth® speakerphone, etc. All of which, are not covered under warranty.
- (4) Do not use any diluents or volatile liquid to clean the Bluetooth® speakerphone.
- (5) Do not use the Bluetooth® speakerphone in a hazardous location.

Package includes

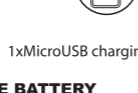

1xHemisphere 1xMicroUSB charging cable 1x3.5mm audio cable 1x user manual

CHARGING THE BATTERY

- 1. Plug the USB charging cable into Hemisphere.
- 2. Plug the other end of the USB charging cable into your computer or AC charger with USB port.
- 3. The red LED light is on when charging.
- 4. When the battery is fully charged, the red LED light turns off and turns on in solid blue.

Important

• For the first time use, please charge the speakerphone fully before using.

TURNING SPEAKERPHONE ON/OFF

To turn on:

Press and hold the MF-button for 3 seconds when the device is off. The blue LED light flashes 3 times and you can hear the voice prompt.

To turn off:

Press and hold the MF-button for 4 seconds when the device is on. The blue LED light flashes twice and then turns off, you can hear 4 beeps and the voice prompt.

PAIRING THE SPEAKERPHONE

You are required to pair the speakerphone with your mobile phone or other Bluetooth devices once before using it.

- 1. Turn on the speakerphone.
- 2. Press and hold the MF-button for 5 seconds. The LED light flashes in blue and red alternatively.
- 3. Set your phone or other Bluetooth devices to discover 'Hemisphere' and follow the instruction.
- 4. If your phone asks for passkey or PIN-code, confirm with 0000 (4 zeros).

5. You will hear the voice prompt of 'Phone one connected' or 'Phone two connected' when Hemisphere is connected to your phone or other Bluetooth devices.

AUTOMATIC PAIRING MODE

If there is no paired device in the range, you can turn on the Hemisphere (press and hold the MF-button for 3 seconds) and it will go into pairing mode automatically after 15 seconds.

Note:

If Hemisphere is not in a pairing mode, your mobile phone or other Bluetooth devices will not find it. Please set the speakerphone into pairing mode before making your mobile phone search for Hemisphere.

PAIRING THE SPEAKERPHONE WITH THE SECOND MOBILE PHONE

Hemisphere supports multipoint. This means Hemisphere can be paired and connected with 2 mobile phones at the same time.

- 1. Pair and connect the speakerphone with the first mobile phone. (Please refer to the 'PAIRING THE SPEAKERPHONE')
- 2. Turn off the speakerphone.
- 3. Press and hold the MF-button to go to the pairing mode and connect with second mobile phone.
- 4. Turn off the speakerphone after connecting with second mobile phone.
- 5. Turn on the speakerphone, two mobile phones will connect with Hemisphere at the same time.

LANGUAGE SELECTION

Press and hold the MF-button for 3 seconds in the state of pairing mode. The blue LED light flashes and you can hear the voice prompt in 5 languages. You can press the MF-button to select your preferred language accordingly.

VOICE RECOGNITION

Hemisphere supports VOICE RECOGNITION in English. When there is incoming call, you will

hear the voice prompt 'Say a Command: Answer/Irgnore', you can say 'Answer' to answer the call or 'Ignore' to reject the call within 2 seconds after the voice prompt. If you do not say a command within 2 seconds, Hemisphere will recognize it as an invalid command, then you should answer or reject the call manually.

Note: The feature of voice recognition may not work normally due to different English accent or other sounds around.

MAKING CALLS

Once the speakerphone is successfully paired and connected with your mobile phone, you can use it to make and receive calls. The speakerphone can be used with voice dialing if your mobile phone supports this feature. Please check your mobile phone's manual for more information.

1. Using voice dialing:

Press and hold the MF-button for 3 seconds, and you will hear 3 beeps, wait for a voice prompt and say the name of the person you want to call. (Some mobile phones may not support this feature.)

2. Using the phone keys to make calls:

Enter and dial the number on the mobile phone as you normally do. Once the call has been set up, the sound will be transmitted to the speakerphone automatically.

3. Redial:

Short press the MF-button twice to redial the last number.

ANSWERING/ENDING/REJECTING CALLS

When the speakerphone is turned on and there is an incoming call, you will hear a musical tone or beep (This is subject to the mobile phone.).

- Press the MF-button to answer the call.
- Press the MF-button to end the call.
- Press and hold the MF-button for 2 seconds to reject the call.

TRANSFERRING CALLS

To transfer a call to the mobile phone and back:

During both incoming call and outgoing call state, you can press and hold the MF-button for 2 seconds to transfer the call to the mobile phone, you can hear 4 beeps. If you want to

transfer the call back to the speakerphone, press and hold the MF-button for 2 seconds again, you can hear 3 beeps. Some mobile phones may require more confirmation.

ADJUST THE VOLUME

Short press the "VOL+" for volume up.
Short press the "VOL-" for volume down.

PLAY/PAUSE THE MUSIC

Press MF-button to play when the music is paused and press MF-button to pause when the music is playing.

NEXT SONG/PREVIOUS SONG

Short press the ">>" for next song
Short press the "<<" for previous song

WHEN THE BATTERY IS LOW

The red LED will wink when the battery is low. At the same time, you can hear 5 quick beeps. At this time, please charge your Hemisphere.

Important

- You must use the authorized charger to charge the speakerphone.
- You must charge the Bluetooth® speakerphone if it has been not used for more than 12 months.

FACTORY RESET

To factory reset the speakerphone, press and hold the MF-button and "VOL-" at the same time for 3 seconds, the blue LED flashes quickly.

Hemisphere supports audio line-in

Hemisphere supports 3.5mm audio line-in with another device even when it is Bluetooth-connected with your mobile phone. When your mobile phone has been connected with the speakerphone by Bluetooth, and you want to use your MP3 or other mobile phone to play music from this speakerphone, then you can connect the speakerphone with this other device by the 3.5mm cable. When the speakerphone is connected by 3.5 cable, it will play the music of 3.5mm cable preferentially. When the speakerphone is Bluetooth-connected with one device and cable-connected with another device, the buttons still work, but only for the Bluetooth-connected device, the buttons at this status are not for the cable-connected device.



GUARANTEE

Jabees is a registered trademark of FreeTek International Co.,Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of **twelve (12) months** from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.