



# Jmusic


## Quick Reference Guide

www.freetekic.com

### Jabees JMusic is a V3.0 Bluetooth® stereo speakerphone.

#### Overview of JMusic:

- (1). On /off /MF Button
- (2). Bluetooth button
- (3). Vol+/next song
- (4). Vol-/previous song
- (5). Microphone
- (6). 3.5mm Audio jack
- (7). MicroUSB charging jack

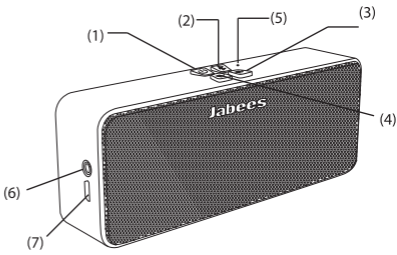

### Introduction

Congratulations, thank you for choosing Jabees JMusic Bluetooth® Stereo Speakerphone. This manual will help you to operate the Jabees JMusic, but you should first familiarize yourself with the Bluetooth® functionality of your mobile phone or other devices before using the Bluetooth® Stereo Speakerphone JMusic.

### Safety Rules

- (1) Please follow the rules depicted in this manual closely to ensure your safety. Before using this Bluetooth® stereo speakerphone, we would strongly encourage you to read through this user manual.
- (2) Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- (3) Do not modify, repair or dismantle this Bluetooth® stereo speakerphone, doing so, may result in fires, electric shocks, complete breakdown of this Bluetooth® stereo speakerphone, etc. All of which, are not covered under warranty.
- (4) Do not use any diluents or volatile liquid to clean the Bluetooth® stereo speakerphone.
- (5) Do not use the Bluetooth® stereo speakerphone in a hazardous location.

### Package includes



1xJabees Jmusic

1xMicroUSB charging cable

1x3.5mm audio cable

1x user manual

### CHARGING THE BATTERY

1. Plug the USB charging cable into JMusic.
2. Plug the other end of the USB charging cable into your computer or AC charger with USB port.
3. The red LED light of MF Button turns on in solid during charging.
4. When the battery is fully charged, the red LED light turns off.

#### Important

- For the first time use, please charge the speakerphone fully before using.

### TURNING SPEAKERPHONE ON/OFF

#### To turn on:

Press and hold the MF-button for 3 seconds, and then Bluetooth blue LED turns on and slowly flashes. The speakerphone is now turned on.

#### To turn off:

Press and hold the MF-button for 3 seconds when the device is on. The blue LED light flashes once and then turns off, you can hear a beep at the same time. The speakerphone is now turned off.

### PAIRING THE SPEAKERPHONE

You are required to pair the speakerphone with your mobile phone or other Bluetooth devices once before using it.

1. Turn on the speakerphone.
2. Press and hold the Bluetooth button for 3 seconds. The red LED on the MF-button and blue LED on the Bluetooth button quickly flash alternately with a beep.
3. Set your phone or other Bluetooth devices to discover 'JMusic' and follow the instruction.
4. If your phone asks for passkey or PIN-code, confirm with 0000 (4 zeros).
5. You will hear a beep when JMusic is connected to your phone or other Bluetooth devices.

### AUTOMATIC PAIRING MODE

If there is no paired device in the range, you can turn on the JMusic (press and hold the MF-button for 3 seconds) and it will go into pairing mode automatically.

Note: If JMusic is not in a pairing mode, your mobile phone or other Bluetooth devices will not find it. Please set the speakerphone into pairing mode before making your mobile phone search for JMusic.

### MAKING CALLS

Once the speakerphone is successfully paired and connected with your mobile phone, you can use it to make and receive calls. The speakerphone can be used with voice dialing if your mobile phone supports this feature. Please check your mobile phone's manual for more information.

#### 1. Using voice dialing:

Short press the MF-button twice, wait for a voice prompt and say the name of the person you want to call. (Some mobile phones may not support this feature.)

#### 2. Using the phone keys to make calls:

Enter and dial the number on the mobile phone as you normally do. Once the call has been set up, the sound will be transmitted to the speakerphone automatically.

#### 3. Redial:

Short press the Bluetooth button twice to redial the last number.

### ANSWERING/ENDING/REJECTING CALLS

When the speakerphone is turned on and there is an incoming call, you will hear a musical tone or beep (This is subject to the mobile phone.).

- Short press the MF-button to answer the call.
- Short press the MF-button to end the call.
- Short press and hold the MF-button for 2 seconds to reject the call.

### TRANSFERRING CALLS

#### To transfer a call to the mobile phone and back:

During both incoming call and outgoing call state, you can press and hold the Volume + and - buttons at the same time to transfer the call to the mobile phone. If you want to

transfer the call back to the speakerphone, press and hold the Volume + and - buttons at the same time again. Some mobile phones may require more confirmation.

### ADJUST THE VOLUME

Short press the "VOL+" for volume up.  
Short press the "VOL-" for volume down.

### PLAY/PAUSE THE MUSIC

Press MF-button to play when the music is paused and press MF-button to pause when the music is playing.

### NEXT SONG/PREVIOUS SONG

Press and hold "VOL+" for next song.  
Press and hold "VOL-" for previous song.

### WHEN THE BATTERY IS LOW


The red LED of MF button will blink when the battery is low. At the same time, you can hear the long beep. At this time, please charge your JMusic.

#### Important

- You must use the authorized charger to charge the speakerphone.
- You must charge the Bluetooth® speakerphone if it has been not used for more than 12 months.

### JMusic supports audio line-in

JMusic supports 3.5mm audio line-in with another device even when it is Bluetooth-connected with your mobile phone. When your mobile phone has been connected with the speakerphone by Bluetooth, and you want to use your MP3 or other mobile phone to play music from this speakerphone, then you can connect the speakerphone with other device by the 3.5mm cable. When the speakerphone is connected by 3.5 cable, it will play the music of 3.5mm cable preferentially. When the speakerphone is Bluetooth-connected with one device and cable-connected with another device, the buttons still work, but only for the Bluetooth-connected device, the buttons at this status are not for the cable-connected device.

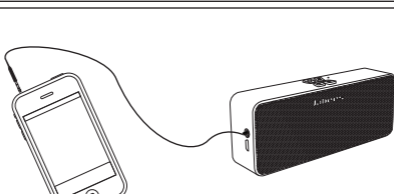

### GUARANTEE

Jabees is a registered trademark of FreeTek International Co., Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of **twelve (12) months** from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.