



Qubic


Quick Reference Guide

www.freetekic.com

Qubic is a Bluetooth® speakerphone which is compliant with the Bluetooth® V3.0+EDR.

Overview of Qubic:

- (1). Play/Pause/MF Button
- (2). Volume down/Previous song
- (3). Volume up/Next song
- (4). LED/Microphone
- (5). NFC tag
- (6). 3.5mm Audio jack
- (7). MicroUSB charging jack
- (8). On /off switch

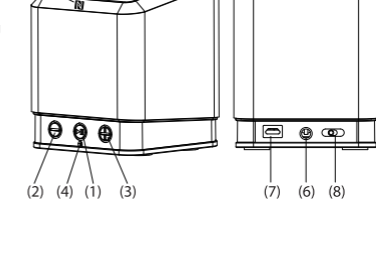

Introduction

Congratulations, and thank you for choosing Qubic Bluetooth® Speakerphone. This manual will help you to operate the Qubic, but you should first familiarize yourself with the Bluetooth® functionality of your mobile phone or other devices before using the Bluetooth® Speakerphone Qubic.

Safety Rules

- (1) Please follow the rules depicted in this manual closely to ensure your safety. Before using this Bluetooth® speakerphone, we would strongly encourage you to read through this user manual.
- (2) Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- (3) Do not modify, repair or dismantle this Bluetooth® speakerphone, Doing so may result in fires, electric shocks, complete breakdown of this Bluetooth® speakerphone, etc. All of which, are not covered under warranty.
- (4) Do not use any diluents or volatile liquid to clean the Bluetooth® speakerphone.
- (5) Do not use the Bluetooth® speakerphone in a hazardous location.

Package includes



1x Qubic



1x MicroUSB charging cable



1x 3.5mm audio cable



1x user manual

CHARGING THE BATTERY

1. Plug the USB charging cable into Qubic.
2. Plug the other end of the USB charging cable into your computer or AC charger with USB port.
3. The red LED light is on when charging.
4. The LED light turns off when the battery is fully charged.

Important

- For the first time use, please charge the speakerphone fully before using.

TURNING SPEAKERPHONE ON/OFF

To turn on:

Switch on the speakerphone when the device is off. The LED light turns on in solid blue for 2 seconds and you can hear 2 beeps.

To turn off:

Simply switch off the speakerphone, the LED light turns on in solid blue for 2 seconds and you can hear 2 beeps.

PAIRING THE SPEAKERPHONE

You are required to pair the speakerphone with your mobile phone or other Bluetooth devices once before using it.

1. Turn on the speakerphone, and the speakerphone will go into pairing mode automatically if there is no paired device in the range.
2. Set your phone or other Bluetooth devices to discover 'Qubic' and follow the instruction.
3. If your phone asks for passkey or PIN-code, confirm with 0000 (4 zeros).

Note:

1. If Qubic is not in a pairing mode, your mobile phone or other Bluetooth devices will not find it. Please set the speakerphone into pairing mode before making your mobile phone searches for Qubic.
2. If no pairing is possible for a period of time (approximately 3 minutes), the speakerphone will be out of pairing mode.
3. The speakerphone will be automatically off when battery is lower than 2.7V.

MANUAL PAIRING


1. If the speakerphone can not enter pairing mode automatically, please press and hold the MF button for 5 seconds to get it into pairing mode.
2. If the bluetooth function on your mobile phone has been turned off and turned on again, please short press the MF button of the speakerphone to reconnect with your mobile phone, and you will hear a beep.

NFC CONNECTION & DISCONNECTION

Qubic is with in-built NFC technology for simple and fast connection or disconnection. If your mobile phone supports NFC, you can do the fast connection and disconnection as below:


Connection

1. Switch on the Qubic.
2. Turn on the NFC in your mobile phone
3. Place your mobile phone's NFC reader near the NFC tag of Qubic, the distance is required to be 2cm or less.
4. Qubic and your mobile phone is now connected.

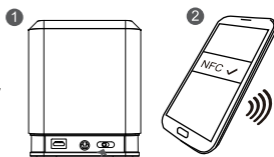

Disconnection

 1. When the mobile phone and Qubic is connected, place your mobile phone's NFC reader near the NFC tag of Qubic, the distance is required to be 2cm or less.



2. Qubic and your mobile phone is now disconnected.
3. Switch off the Qubic.

MAKING CALLS

Once the speakerphone is successfully paired and connected with your mobile phone, you can use it to make and receive calls. The speakerphone can be used with voice dialing

if your mobile phone supports this feature. Please check your mobile phone's manual for more information.

1. Using voice dialing:

Short press the MF-button for 2 times, and you will hear 1 beep, wait for a voice prompt and say the name of the person you want to call. (Some mobile phones may not support this feature.)

2. Using the phone keys to make calls:

Enter and dial the number on the mobile phone as you normally do. Once the call has been set up, the sound will be transmitted to the speakerphone automatically.

3. Redial the last number:

Press and hold the MF button for 2 seconds to redial the last number.

ANSWERING/ENDING/REJECTING CALLS

When the speakerphone is turned on and there is an incoming call, you will hear a musical tone or beep (This is subject to the mobile phone.).

- Press the MF-button to answer the call.

- Press the MF-button to end the call.

- Press and hold the MF-button for 2 seconds to reject the call.

TRANSFERRING CALLS

To transfer a call to the mobile phone and back:

During both incoming call and outgoing call state, you can press and hold the V+ and V- buttons for 2 seconds to transfer the call to the speakerphone, you can hear 1 beep. If you want to transfer the call back to the speakerphone, press and hold the V+ and V- buttons for 2 seconds again, you can hear 1 beep. Some mobile phones may require more confirmation.

ADJUST THE VOLUME

Press and hold the "VOL+" for volume up.

Press and hold the "VOL-" for volume down.

PLAY/PAUSE THE MUSIC

Press MF-button to play when the music is paused and press MF-button to pause when the music is playing.

NEXT SONG/PREVIOUS SONG

Short press the "VOL+" for next song

Short press the "VOL-" for previous song

WHEN THE BATTERY IS LOW

The red LED will blink when the battery is low. At the same time, you can hear 4 quick beeps. At this time, please charge your Qubic.


Important

- You must use the authorized charger to charge the speakerphone.
- You must charge the Bluetooth® speakerphone if it has been not used for more than 12 months.

Qubic supports audio line-in

Qubic supports 3.5mm audio line-in with another device even when it is Bluetooth-connected with your mobile phone. When your mobile phone has been connected with the speakerphone

by Bluetooth, and you want to use your MP3 or other mobile phone to play music from this speakerphone, then you can connect the speakerphone with this other device by the 3.5mm cable. When the speakerphone is connected by 3.5 cable, it will play the music of 3.5mm cable preferentially. When the speakerphone is Bluetooth-connected with one device and cable-connected with another device, the buttons still work, but only for the Bluetooth-connected device, the buttons at this status are not for the cable-connected device.

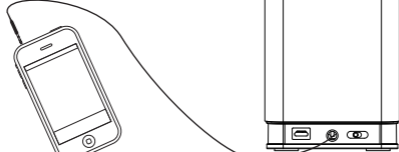

FACTORY RESET

To factory reset the speakerphone, you will have to turn on the speakerphone first. Press and hold the MF button and V+ for 3 seconds, you will hear 2 beeps. The LED light will be in solid red for 2 seconds, then off for 1 second, and on in solid red for 2 seconds again.

GUARANTEE

Jabees is a registered trademark of FreeTek International Co., Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of **twelve (12) months** from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.